


# MODEL 5600SE Downflow - V2.0

## Master Programming Mode Flow Chart

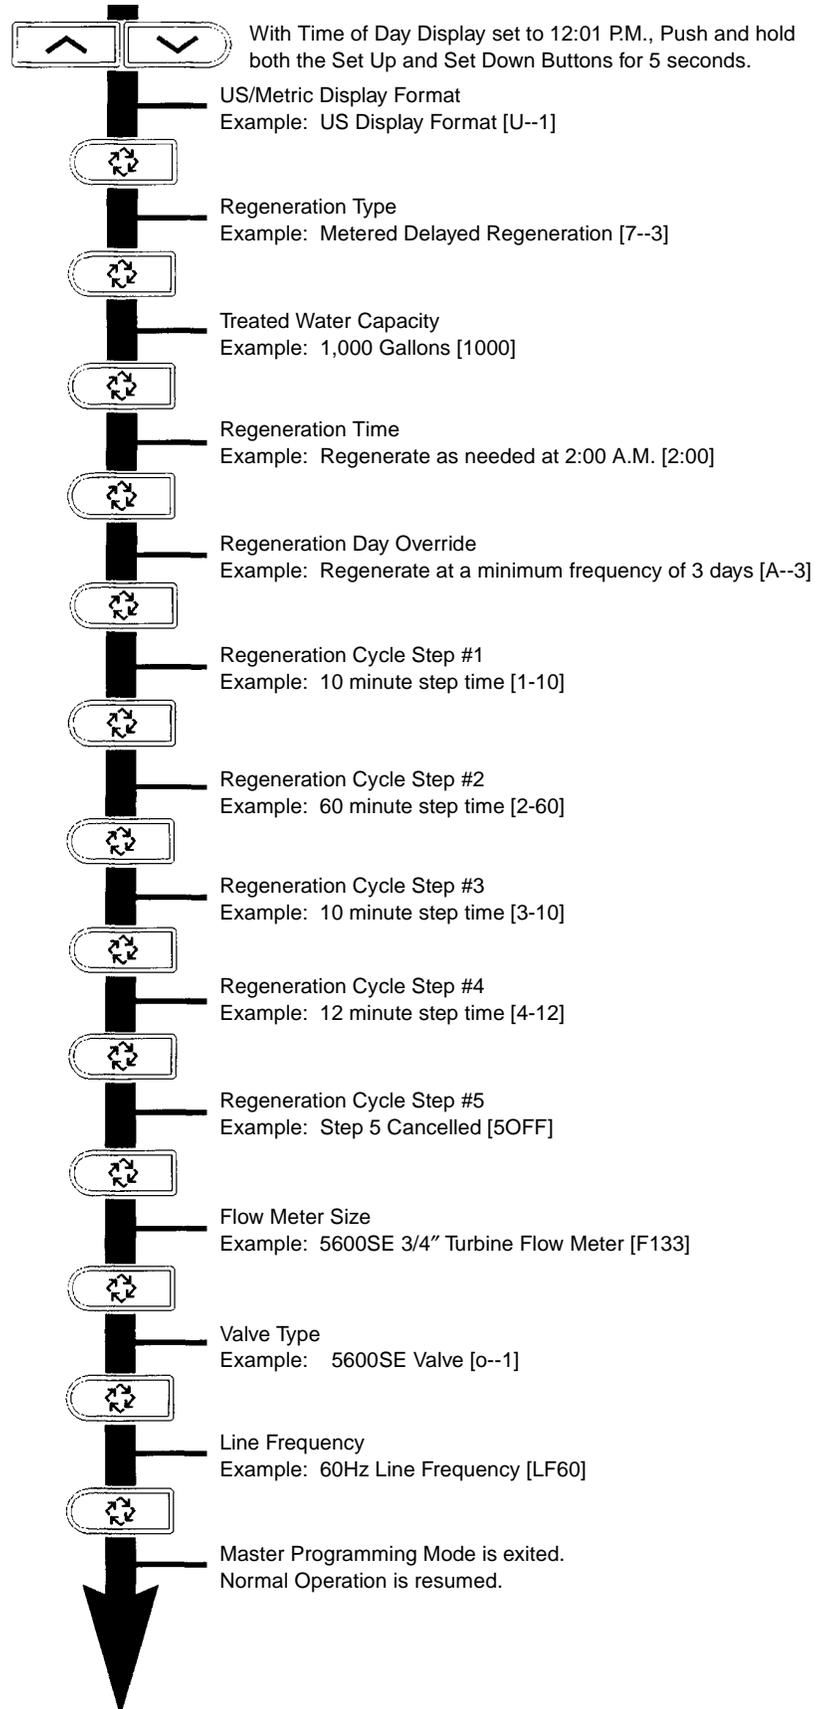


**Note:**

1. Set Time of Day Display to 12:01 P.M.
2. Push and hold both the Set Up and Down Buttons for 5 Seconds.
3. Push Extra Cycle Button once per display until all displays are viewed and normal operation is resumed.
4. Option setting displays may be changed as required by pushing either the Set Up or Down Button.
5. Depending on current valve programming certain displays will not be able to be viewed or set.

# MODEL 5600SE Downflow - V2.0

## Master Programming Mode

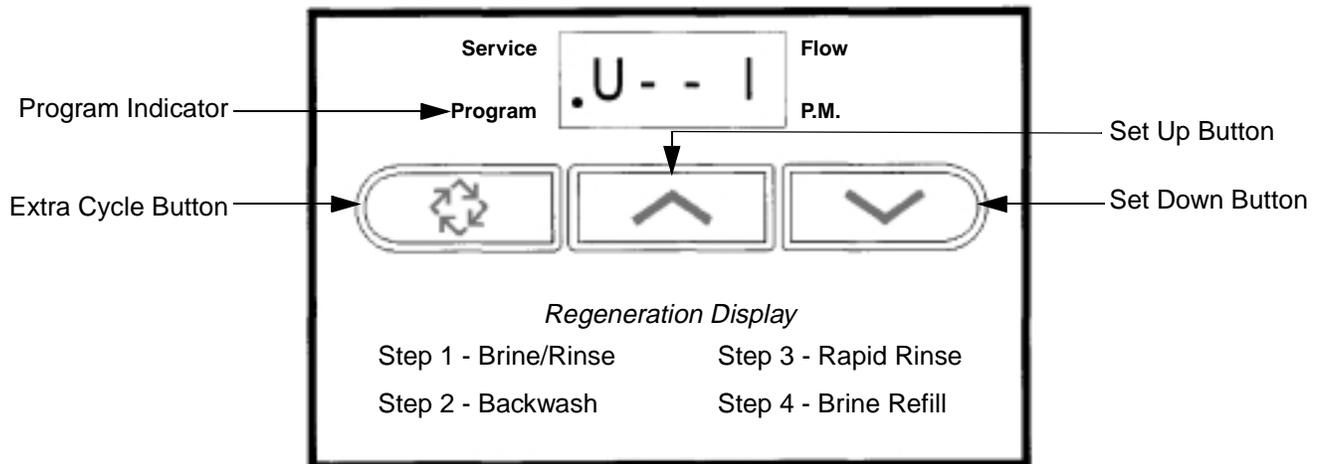

### Entering Master Programming Mode

With Time of Day Display set to 1201 PM, push and hold for 5 seconds both the Set Up and Down Buttons. The Program Indicator will turn on to signal that this mode is entered. In this mode all possible option settings may be viewed.

#### 1. US/Metric Display Format (U)

Depress the Extra Cycle Button. This display is used to set the desired display format. This option setting is identified by the letter U in the first digit. There are two possible settings:

**US Format** uses gallons for volume with a 12 hour timekeeping format. Regeneration timing in minutes.

Example - [ U - - 1 ]

**Metric Format** uses liters for volume with a 24 hour timekeeping format. Regeneration timing in tenths of minutes.

Example - [ U - - 2 ]

**Cubic Meter Format** uses m<sup>3</sup> for volume with a 24 hour timekeeping format. Regeneration timing in tenths of minutes.

Example - [ U - - 4 ]

The **Set UP** and **DOWN Buttons** will adjust this value.

#### 2. Regeneration Type (7)

Depress the Extra Cycle Button. This display is used to set the Regeneration Type. This option setting is identified by the number 7 in the first digit. There are 3 possible settings:

**Timeclock Delayed.** The control will determine that regeneration is required when the set Regeneration Time has been reached. The Regeneration Day Override setting will determine which days a regeneration cycle will be initiated.

Example - [ 7 - - 1 ]

**Meter Immediate.** The control will determine that regeneration is required when the available volume of softened water drops to or below zero. Regeneration to begin immediately.

Example - [ 7 - - 2 ]

# MODEL 5600SE Downflow - V2.0

---

## Master Programming Mode (Cont'd.)

---

### 2. Regeneration Type (7) (Cont'd.)

**Meter Delayed.** The control will determine that a regeneration is required when the available volume of softened water drops to or below zero. Regeneration is to begin immediately at the set Regeneration Time.

Example - [ 7 - - 3 ]

The **Set UP** and **DOWN Buttons** will adjust this value.

### 3. Treated Water Capacity (No Display Code)

Depress the Extra Cycle Button. This display is used to set the amount of treated water (gallons/liters) that can be produced by the unit before a regeneration cycle is required. With Meter Delayed Regeneration Type set, it will be up to the programmer to determine a reserve capacity and subtract that value from the calculated full capacity of the unit. This display will not be viewed with Timeclock Regeneration Type set.

Example: Regenerate every 700 gallons, liters, or m<sup>3</sup> - [ 7 0 0 ]

The **Set UP** and **DOWN Buttons** will adjust this value.

### 4. Regeneration Time (No display Code)

Depress the Extra Cycle Button. The next display viewed is the option setting for Regeneration Time. It is identified by a non-flashing colon between two sets of numbers. Set the desired time of day that a regeneration may occur, if required. This display will not be viewed with Meter Immediate Regeneration Type set.

Example: 2 o'clock A.M. regeneration time - [ 2 : 0 0 ] (A.M. Indicator Dot On)

The **Set UP** and **DOWN Buttons** will adjust this value.

### 5. Regeneration Day Override (A)

Depress the Extra Cycle Button. This display is used to set the maximum amount of time (in days) the unit can be in service without a regeneration. This option setting is identified by the letter 'A' in the first digit. With Meter Immediate Regeneration Type selected, regeneration will begin at the same point in time some amount of days ago when the last regeneration cycle was initiated. With Timeclock or Meter Delayed Regeneration Types selected, regeneration begins at the set Regeneration Time. An OFF setting will cancel this feature with all regeneration types except Timeclock Regeneration were it must be used.

Examples: Override every 7 days - [ A - - 7 ]

Cancel setting - [ A O F F ] (Meter Immediate or Delayed Regeneration Types Only)

The **Set UP** and **DOWN Buttons** will adjust this value.

### 6. Regeneration Cycle Step Programming (1) (2) (3) (4) (5) (6)

Depress the Extra Cycle Button. The next 2-4 displays viewed are part of a series of option settings used to program the Regeneration Cycle. Up to 4 steps can be programmed. Each display is used to set the duration time in minutes (or tenths of minutes - Metric) of that specific step in a regeneration cycle. A step # will turn on for the regeneration cycle step being programmed. Regeneration steps are *skipped* by setting the display to 0 and regeneration *ended* by setting the step # after the last active step to OFF, as shown below and on the next page:

Examples: Regeneration Cycle Step #1 - 8 minutes - [ 1 - - 8 ]

Regeneration Cycle Step #3 - skipped - [ 3 - - 0 ]

# MODEL 5600SE Downflow - V2.0

---

## Master Programming Mode (Cont'd.)

---

### 6. Regeneration Cycle Step Programming (1) (2) (3) (4) (5) (6) (Cont'd.)

Examples: Regeneration Cycle Step #4 - cancelled - [ 4 0 F F ]

Regeneration Cycle Step #4 - 8.5 minutes - [ 4 - 8.5 ] (Metric Format)

Depress the Extra Cycle Button once per display to advance through Regeneration Cycle Step Programming.

The 5600SE control has a separate brine tank fill cycle. Your desired salt setting must be calculated, using the blue (.25 gpm) or black (.5 gpm) rate of refill (in gpm) times your timer setting. Then using one gallon of fresh water dissolving approximately 3 lbs. of salt, calculate your refill time.

Example: lbs. salt  $\div$  B.L.F.C. Size = refill time in minutes, 10 lbs. salt  $\div$  3  $\div$  .25 = 13.3 minute refill

The **Set UP** and **DOWN Buttons** will adjust these values.

### 7. Flow Meter Size (F)

Depress the Extra Cycle Button. The next display is used to set the flowmeter size. This option setting is identified by the letter F in the first digit. In this display set the proper amount of pulses generated by the flow meter for each gallon or liter of water flow. This setting will not be viewed with Timeclock Regeneration Type selected.

Examples - [ F | 3 3 ] 3/4" Turbine Flow Meter (US Format)

[ F 3 5. | ] 3/4" Turbine Flow Meter (Metric Format)

The **Set UP** and **DOWN Buttons** will adjust this value.

### 8. Valve Type (o)

Depress the Extra Cycle Button. This display is used to set the type of valve used with the control. This option setting is identified by the letter o in the first digit. There are two possible selections with #1 being the required setting:

Examples - [ o - - 1 ] 5600SE Valve Operation.

[ o - - 2 ] Option Not Typically Used.

The **Set UP** and **DOWN Buttons** will adjust this value.

### 9. Line Frequency (LF)

Depress the Extra Cycle Button. This display is used to set the frequency of the power applied to the control. When properly set, all timekeeping functions will remain accurate. This option setting is identified by the letter o in the first digit. There are two possible selections.

Examples - [ L F 5 0 ] 50Hz Line Frequency Operation.

[ L F 6 0 ] 60Hz Line Frequency Operation.

The **Set UP** and **DOWN Buttons** will adjust this value.

### Exiting This Option Setting Level

Push the Extra Cycle Button once per display until all have been viewed. The Program Mode will be exited and normal operation resumed.

### Resetting Permanent Programming Memory -

Push and hold the Set Up and Down Buttons for 25 seconds or until the Time Of Day Display resets to 12:00 P.M. All option settings will then reset to default values. Control programming will then have to be reset as necessary.